

QUICKSTART

KM 100/100 R LPG



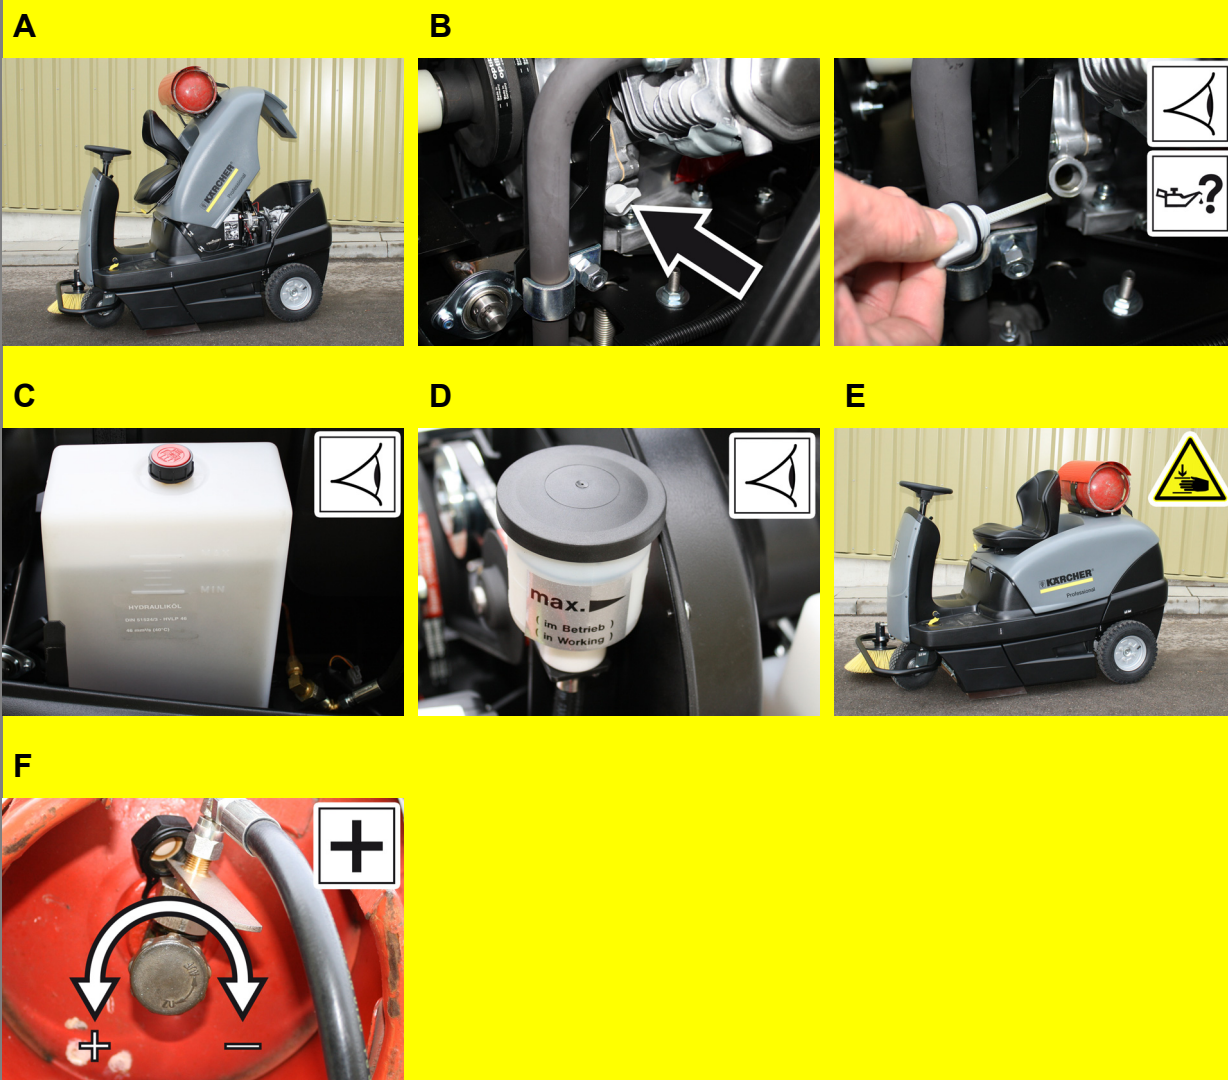
Warning

These are only brief instructions! Please read and comply with these instructions prior to using or servicing your appliance.

The non-compliance of the operating and safety instructions may lead to damages of the appliance and to dangers for the operator and other persons.


Start up

1



- A Opening and securing cover
- B Check oil level
- C Check the hydraulic oil level on the storage container.
- D Check oil level in the equalisation container.
- E Close cover.
- F Open the gas drawing valve by turning it in anti-clockwise direction.

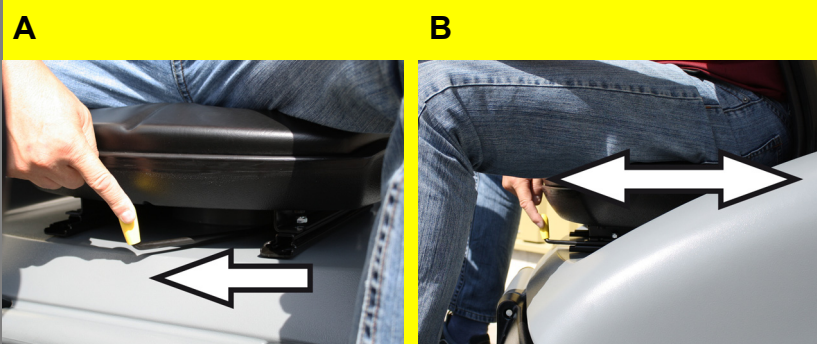
2



- A Pull seat adjustment lever inwards.
- B Slide seat, release lever and lock in place. Check that the seat is properly locked in position by attempting to move it backwards and forwards.

Operation

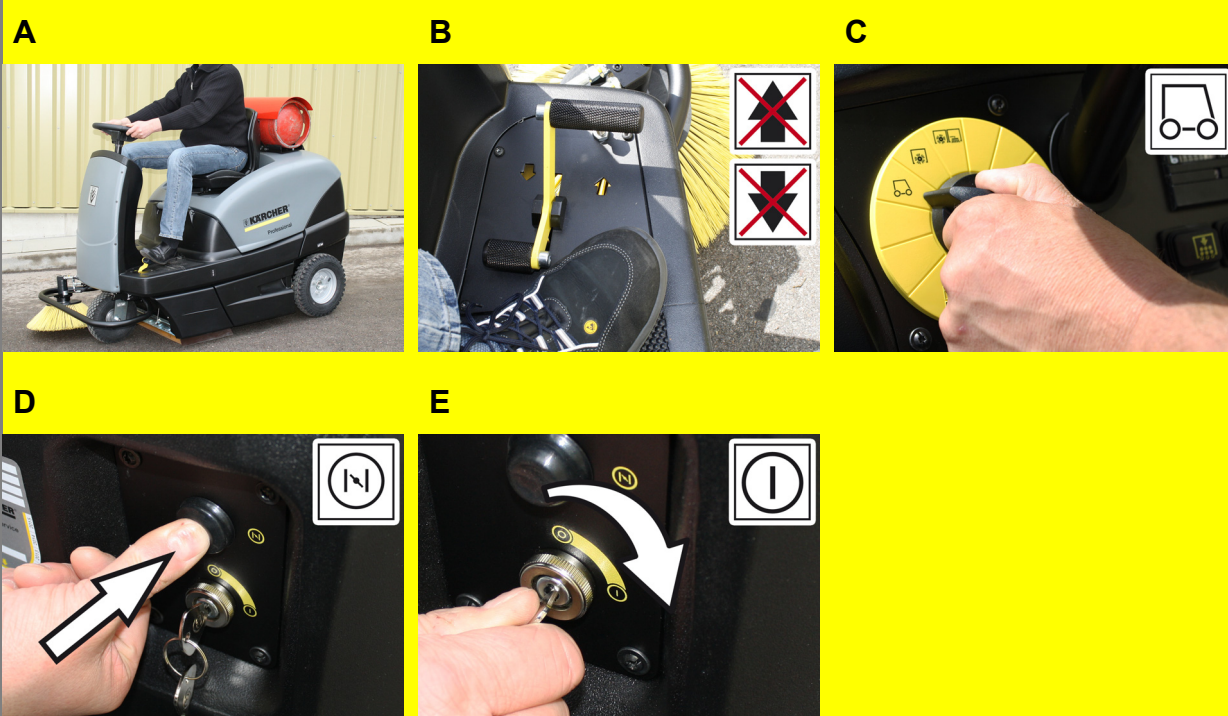1



Starting the machine

- A Sit on the driver's seat.
- B Do NOT press the accelerator pedal.
- C Set programme switch to step 1 (driving).
- D Press remote switch for 5 seconds, then release it.
- E Turn the ignition key to position "I". If the machine starts, release the ignition key.

Operation

2



Drive the machine

- A Press slowly the accelerator pedal "forward".
- B Press slowly the accelerator pedal "reverse".
- C Release the accelerator pedal, the machine brakes automatically and stops.

3



Sweeping with sweep roller

- A Set programme switch to step 2. Roller brush is lowered.

4



Sweeping with side brushes

- A Set programme switch to step 3. Side brushes and roller brush are lowered.

5



Sweeping with bulk waste flap raised

- A Press the pedal for the bulk waste flap forwards and keep pressed down. To lower it, take foot off pedal.

6



Sweeping damp or wet floors

- A Open wet/dry flap.

7



Cleaning the dust filter

- A During operations, the dust filter should be shaken and cleaned every 15-30 minutes depending on the amount of collected dust.

8

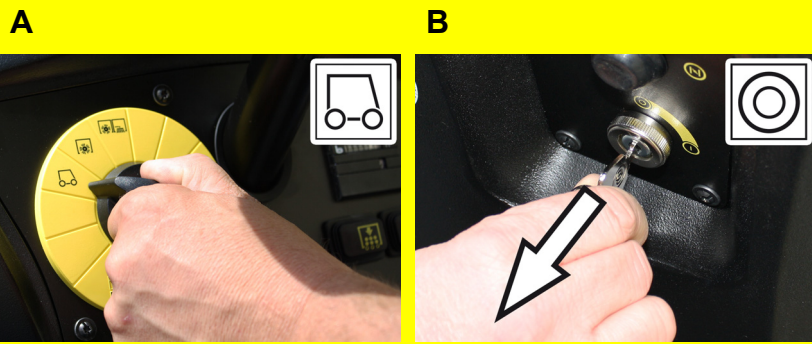


Emptying waste container

- A Raise the waste container slightly and pull it out. Empty waste container. Push in the waste container and lock it. Empty opposite waste container.

Finish operation


1



Turn off the appliance

- A Set programme switch to step 1 (driving).
The side brush and roller brush are raised.
- B Turn ignition key to "0" and remove it.

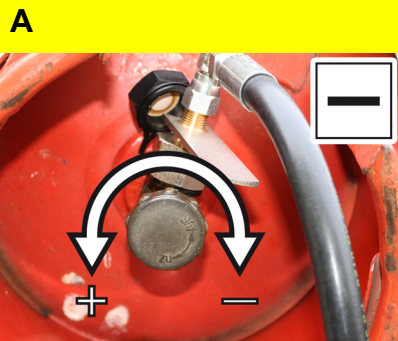2



Close the gas inlet

- A Close gas drawing valve by turning it in clock-wise direction.

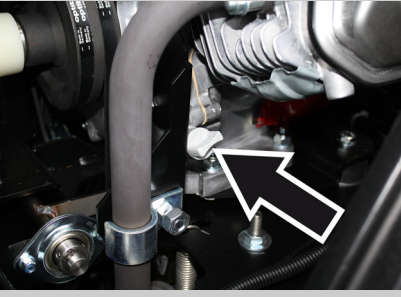
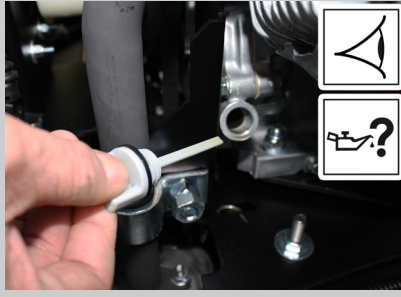
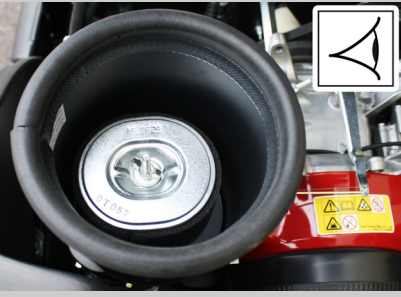
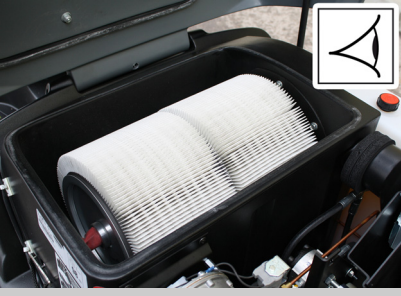

3



Emptying waste container

- A Raise the waste container slightly and pull it out.
Empty waste container.
Push in the waste container and lock it.
Empty opposite waste container.


Maintenance and care

			daily	weekly	Kärcher Customer Service
1	<p>A</p>  	<p>A Check engine oil level.</p>			
2	<p>A</p>	<p>A Check gas pipes and connecting screws. Check gas filter in the screw to the gas cylinder to see if it is dirty, clean it if required (every time you change the cylinder).</p>			
3	<p>A</p> 	<p>A Check air filter.</p>			
4	<p>A</p> 	<p>A Check dust filter and clean filter box, if required.</p>			
5	<p>A</p> 	<p>A Clean the machine with a damp cloth which has been soaked in mild detergent.</p> <p>⚠ Warning <i>Risk of damage! Do not wash down the appliance with water and do not use aggressive detergents.</i></p>			

Troubleshooting

1

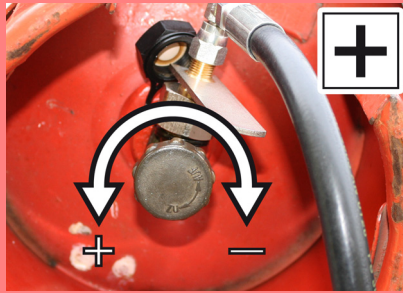A

B


Appliance cannot be started

- A Sit on the driver seat, the seat contact switch gets activated
- B Open the gas drawing valve by turning it in anti-clockwise direction.
Replace gas bottle if required.

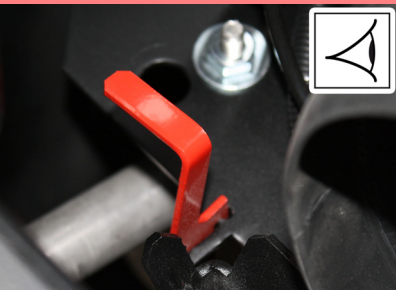
2

A


Engine is running erratically

- A Clean or replace air filter

3

A


Engine is running but machine is not moving

- A Check setting of freewheel lever

4

A

B


Machine is not sweeping properly

- A Check roller brush and side brushes for wear, replace if necessary.
- B Check function of bulk waste flap

5

A

B


Dust gathers in the machine

- A Empty waste container
 - B Check dust filter, clean or replace
 - C Close wet/dry flap
- Roller brush does not turn.
- A Remove belts or cords from roller brush

C
